



## Quick Installation Guide

# Firewall Access

SwitchView IP® 1020 Remote Access Device and DSR® Switches

The following instructions will help you connect to the On-Board Web Interface through a firewall.

For more detailed information, please consult your installer/user guide.

## To access the On-Board Web Interface through a firewall

### Introduction

You can configure your SwitchView IP 1020 remote access device or DSR switch to allow users to connect to the On-Board Web Interface through a firewall.

#### 1 System configuration


In a typical configuration, the user's server is located outside of the firewall and the SwitchView IP remote access device or DSR switch resides inside the firewall. In this case, the firewall must be configured to allow four TCP/IP ports inside the firewall.

#### 2 To configure the firewall

Configure your firewall to forward ports 80, 443, 8192 and 2068 from its external interface to the KVM switch through the firewall's internal interface. Consult the manual for your firewall for specific port forwarding instructions.

#### 3 To connect to the SwitchView IP or DSR On-Board Web Interface

Open a web browser and enter the external IP address of the firewall. The SwitchView IP 1020 Explorer or DSR Explorer will open and prompt you to log in.

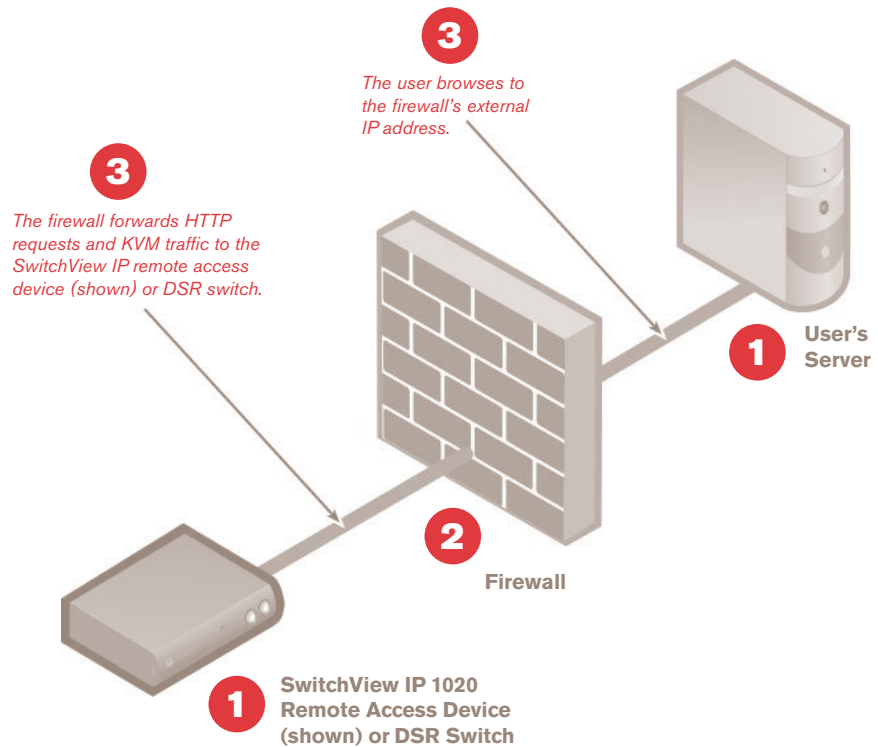

**NOTE:** For more information about the SwitchView IP 1020 remote access device, see the SwitchView IP 1020 Installer/User guide. For more information about the DSR switch, see the DSR Installer/User guide.